



Koke Inc.

582 Queensbury Ave.

Queensbury, NY 12804

PH: (800) 535-5303 FX (888) 231-5521

EM: info@kokeinc.com WEB: www.kokeinc.com

FORK EXTENSION

Owner's Manual





Improper use or careless operation can result in serious personal injuries.

- **ONLY** use fork extensions as a means for supporting palletized loads or skids.
- Inspect extensions before each use. DO NOT use if structurally damaged. Examples of structural damage include:
 - Broken retaining strap, or welds connecting the retaining strap to the main body of the fork extension
 - Cracked, warped or bent fork extensions
- **DO NOT** tip load the fork extensions. Permanent damage to the fork extension, damage to property, or serious personal injury could result.
- **DO NOT** lift loads that exceed the capacity of the fork extensions or the load rating of the forklift, whichever is less.
- **DO NOT** modify the fork extensions in any way. Any modification not expressly approved beforehand in writing by Koke Inc. automatically voids the warranty.

NOTE:

Before putting these extensions into service, you must contact the forklift manufacturer for approval of use and updated data tag(s). **OSHA rule 29 CFR 1910.178(a)(4)** requires the manufacturer to approve the use of the fork extensions on your forklift. **29 CFR 1910.178(a)(5)** requires the manufacturer to also provide updated data tag(s) for the forklift before the extensions may be used.

MOUNTING INSTRUCTIONS

1. Raise the forks off the ground (approximately 4 - 6in).
2. Lift the tip of the fork extension up so that the extension is angled approx 45° to the ground.
3. Move the retaining strap underneath the tapered end of the fork.
4. Slide the fork extension onto the fork until it reaches the heel of the fork
5. Lower the extension onto the fork once the retaining strap is behind the heel of the fork.

WARRANTY

Koke Incorporated warrants this product to be free of defects in material and workmanship for a period of 6 months from date of purchase. The warranty period is based on a 1 shift (8 hour shift) per day operation. The warranty covers parts only, no labor.