



Koke Inc.

582 Queensbury Ave.
Queensbury, NY 12804

PH: (800) 535-5303 FX (888) 231-5521

EM: info@kokeinc.com WEB: www.kokeinc.com

HEAVY DUTY FORK EXTENSION

Owner's Manual





Improper use or careless operation can result in serious personal injuries.

- **ONLY** use fork extensions as a means for supporting palletized loads or skids.
- Inspect extensions before each use. **DO NOT** use if structurally damaged. Examples of structural damage include:
 - Broken retaining strap, or welds connecting the retaining strap to the main body of the fork extension
 - Cracked, warped or bent fork extensions
- **DO NOT** tip load the fork extensions. Permanent damage to the fork extension, damage to property, or serious personal injury could result.
- **DO NOT** lift loads that exceed the capacity of the fork extensions or the load rating of the forklift, whichever is less.
- **DO NOT** modify the fork extensions in any way. Any modification not expressly approved beforehand in writing by Koke Inc. automatically voids the warranty.

NOTE:

Before putting these extensions into service, you must contact the forklift manufacturer for approval of use and updated data tag(s). **OSHA rule 29 CFR 1910.178(a)(4)** requires the manufacturer to approve the use of the fork extensions on your forklift. **29 CFR 1910.178(a)(5)** requires the manufacturer to also provide updated data tag(s) for the forklift before the extensions may be used.

MOUNTING INSTRUCTIONS

1. Lay fork extensions on the ground and line up with forks on forklift.
2. Pull hitch pin clip from retaining pin on back of both fork extensions
3. Remove retaining pins from both fork extensions.
4. Drive forklift forward until both fork extensions rest against the back (vertical part) of the forks.
5. Replace retaining pins and then the hitch pin clips into the fork extensions behind the back of the forks. Raising the forks up to a comfortable working height may help with this step.

WARRANTY

Koke Incorporated warrants this product to be free of defects in material and workmanship for a period of 6 months from date of purchase. The warranty period is based on a 1 shift (8 hour shift) per day operation. The warranty covers parts only, no labor.