KOKE INC

UNIVERSAL ORDER PICKER PLATFORM SHELVING UNIT ASSEMBLY INSTRUCTIONS

HARDWARE: (10) 5/16”X1” bolts, (10) 5/16” lock washers and (8) 5/16” nuts.
TOOLS REQUIRED: (2) 1/2” wrenches

SHELVING UNIT ASSEMBLY:
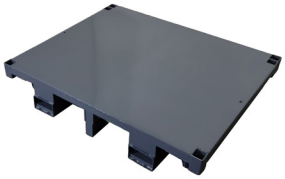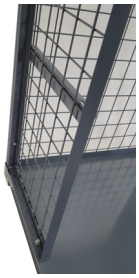
1. Postion platform with enough room to walk around all sides.
2. REAR PANEL: Set the legs of the rear panel of shelving unit into rear most sockets (opposite end from pallet clamp block) in platform. Make sure the mesh and flat part of the angle frame is toward the inside of the platform.
3. Having a helper to hold the side panels for the next step is necessary.
4. SIDE PANELS: Set one of the side panels of the shelving unit on the platform against the rear panel so the holes on both the side and rear panel line up. Secure with (2) of the bolts, lock washers and nuts provided. **Tighten finger tight only.**
5. Thread (1) bolt and lock washer through the side panel frame and into the threaded hole in the platform deck. **Tighten finger tight only.**
6. Repeat steps 4 & 5 for the other side panel of the shelving unit.
7. SHELVES: Each shelf has 2 tabs per side that hooks over the wire mesh on the sides. To install shelf, tilt at an angle (left to right). Insert tabs on shelf through the wire mesh at the height you want on one side. Then rotate shelf down to level, inserting tabs into mesh on other side.
8. Attach the optional Push Handle (if purchased) to the holes on the rear panel with the (4) remaining sets of the bolts, lock washers and nuts provided. **Tighten finger tight only.**
9. Fully tighten ALL nuts and bolts using (2) 1/2” wrenches.